


1. Packing Accessories


Please check the packing box and accessories when you got the item in hand.



Smart Lock

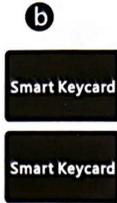


Epoxy Card

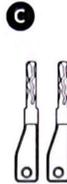

Manual Key



Sucker

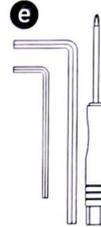


Tools




Manual


2. Product Specification

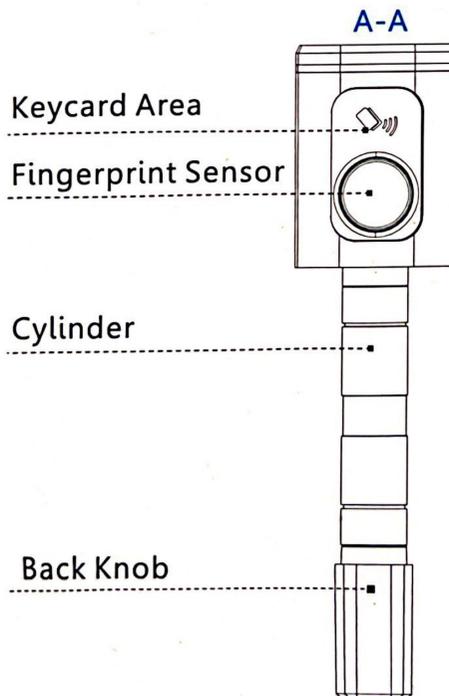

3. Reader View

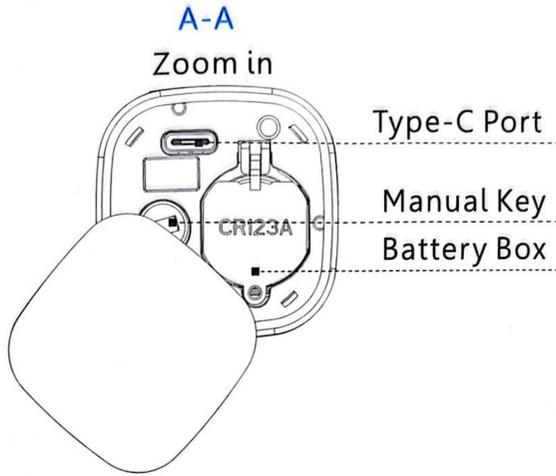


4. Reader View

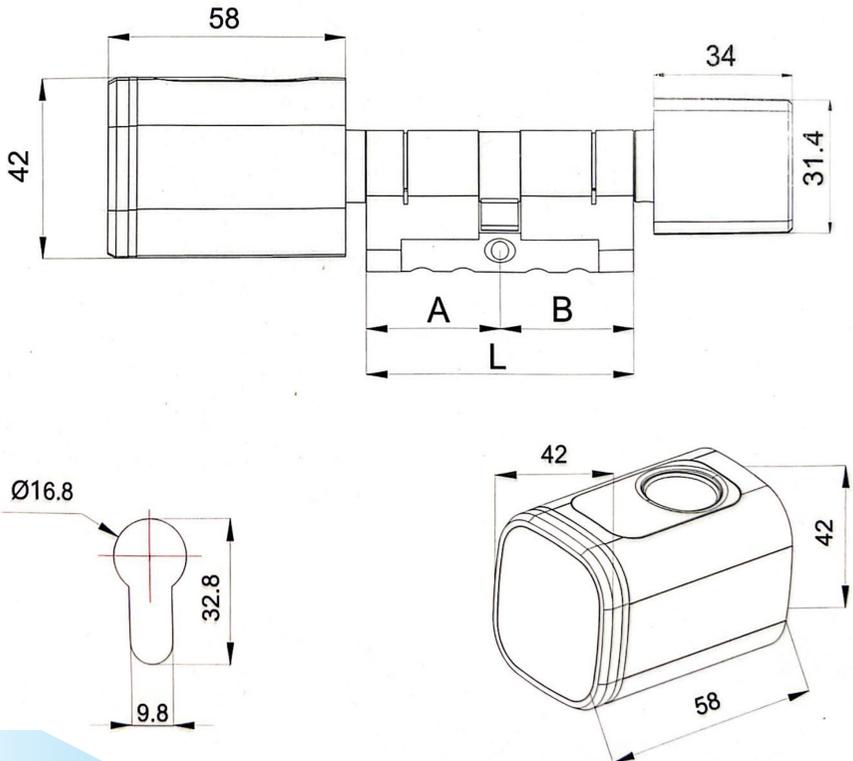


5. Installation Steps

5.1 Please use the screw driver to take off the screw on the back knob position, refer the below Pic.1:

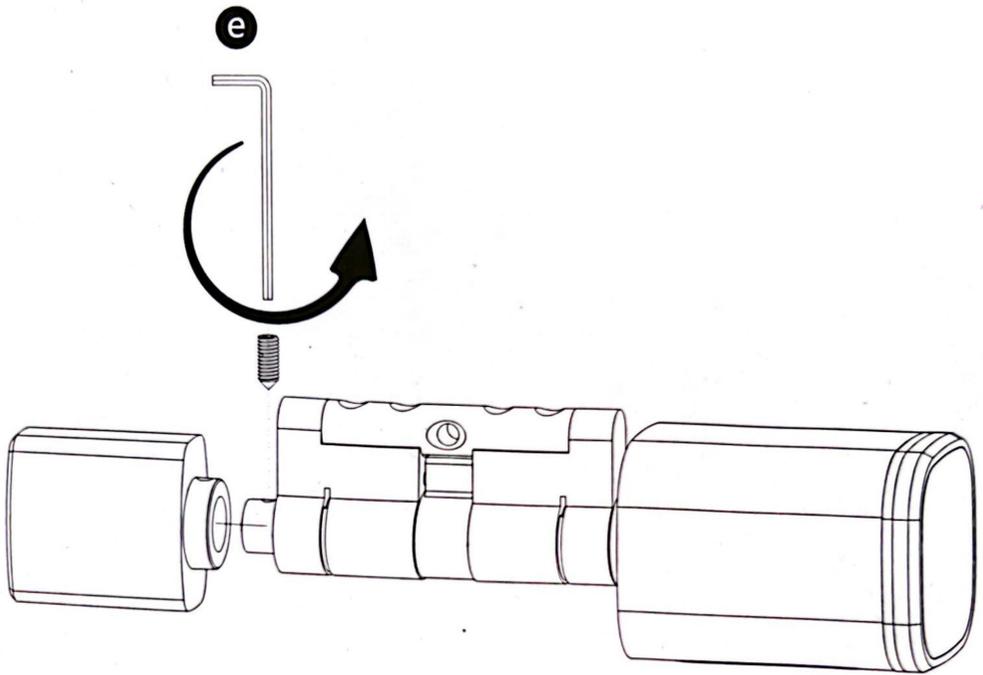


Pic.1

5.2 Please insert the cylinder to the existed lock and fix the cylinder with the long screw as picture 2.

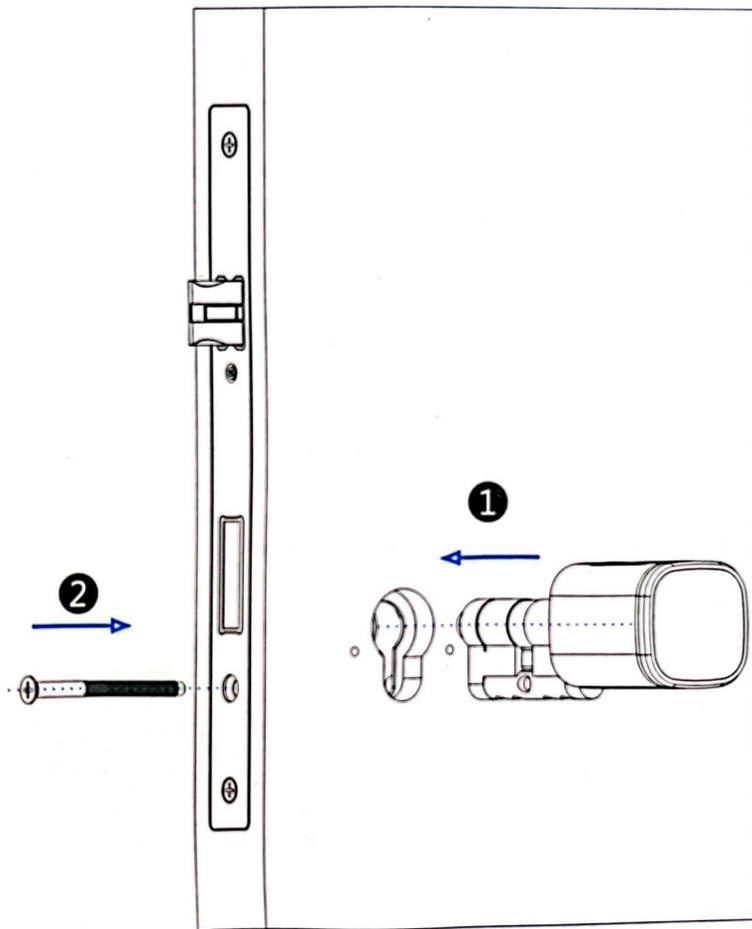



Pic.2

5.3 Please use the screw driver to fasten the screw on the back knob position, refer the below picture 3:

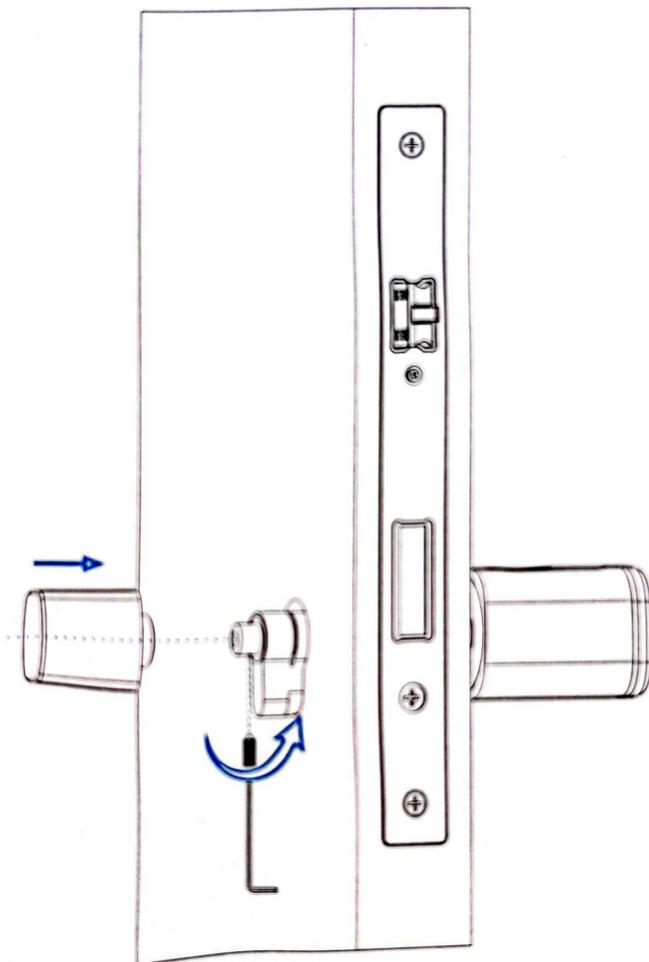


Pic.3

5.4 Please take off the reader cover with the magnet or sucker (included in our accessories bag), assemble 1xCR123A alkaline battery, refer the below picture 4:

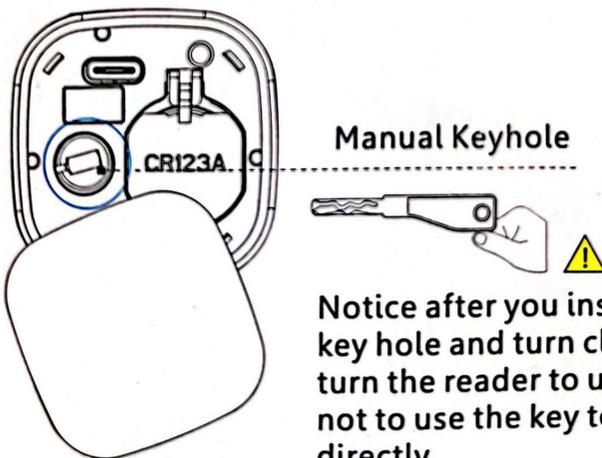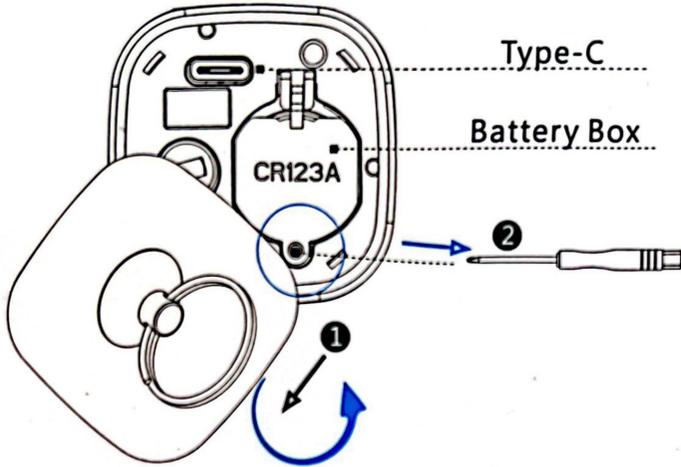


Pic.4

5.5 Please test with your fingerprint under the factory state, any fingerprint will unlock the door lock, refer the below picture 5:

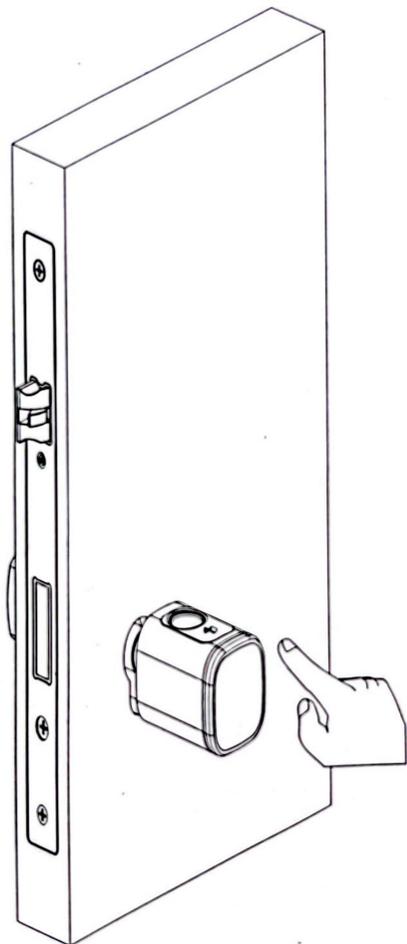

Pic.5

5.6 Please test the lock with keycard after you configure the lock with TTLOCK APP(Refer the Part 6).

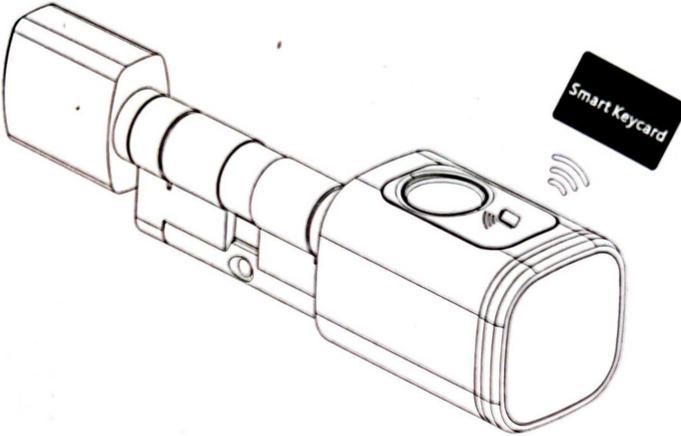

Notice the keycard or fingerprint can only be enrolled by the TTLOCK APP, so it is important to install this app in your mobile before start daily use.




6. TTlock App Settings

Please download the TTLOCK on Apple store or Google play. also you can scan the QR code below to download the APP directly.



6.1 Please register one account with your E-mail or mobile number.

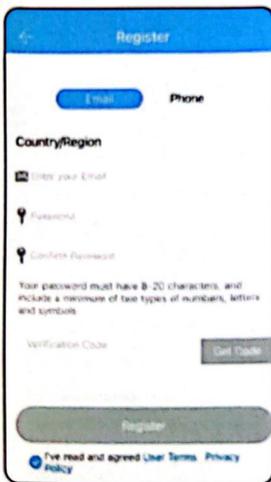

6.1.1 Sign up and Register with mobile or Email




6.1.2 Enter mobile or mail Login with right password




6.1.3 You can reset your password

6.2 Configure the Lock

Please run the TTLOCK APP and click "Add LOCK" on the left side of system setting and follow the steps to configure the lock with APP:

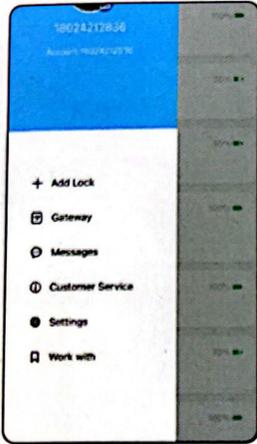


Step 1
Add Lock

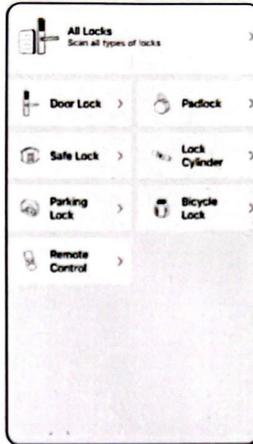


Step 2
Click "All Locks"



Step 3
Press+
Choose First Lock

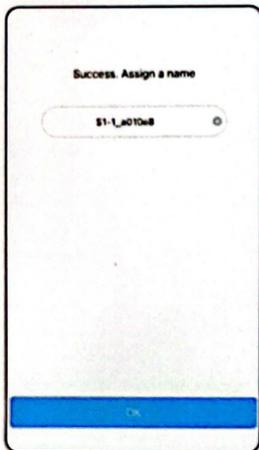


Step 4
Add Lock Successfully
Rename the lock

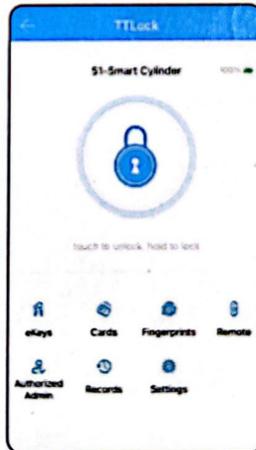

Step 5
Done

6.3 Function Description

Under lock settings, you can see the features for the smart locks, such as eKeys /IC card/Fingerprint/Remote Unlock unlock records and settings etc.

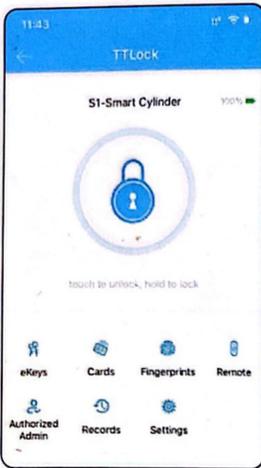

There are many special features under the TTLOCK APP settings. you can make the setting according to your daily requirement.




6.4 Enroll User Fingerprint

Under the lock setting, you can click the fingerprint management and enroll the fingerprint. There is permanent/timed and recurring fingerprint for different condition.




Step 1
Add Fingerprint

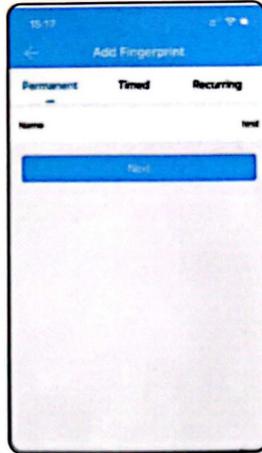

Step 2
Choose Permanent Type



Step 3
Click Start

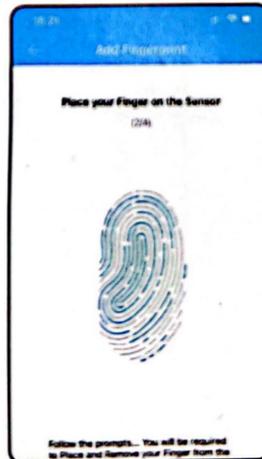


Step 4
Press fingerprint
4 times

6.5 Enroll User Card

Under the lock setting, you can click the option "Cards" and enroll the IC card. There is permanent /timed and recurring card under for different condition.




Step 1
Add Card

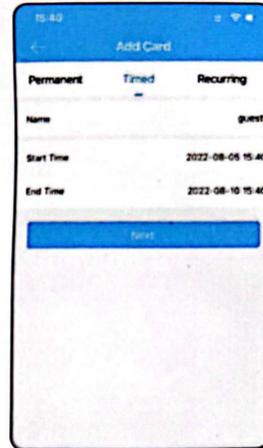

Step 2
Choose Timed Type




Step 3
Touch IC Card to
the lock induction
area

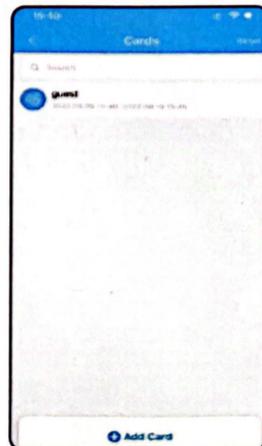


Step 4
Done

6.6 Enroll eKeys


Under the lock setting, you can click the option "Cards" and enroll the IC card. There is permanent /timed and recurring eKeys for different condition.

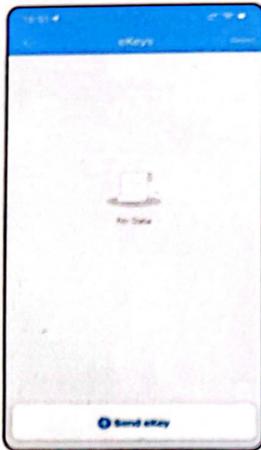

Step 1
Send eKey

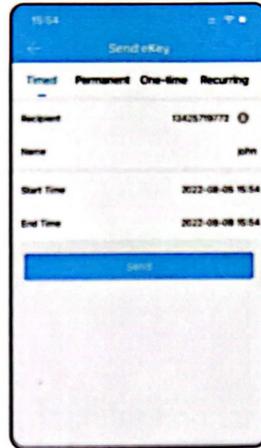

Step 2
Choose Timed Type

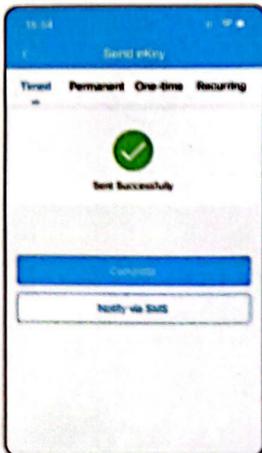

Step 3
Complete, you can share
with SMS to recipient