


Smart Toilet

USER MANUAL

Model No: T13

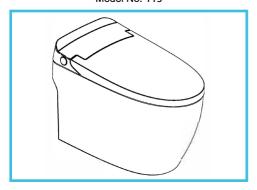

A SMART CHOICE FOR YOUR SMARTER LIFESTYLE

Product functions

Heated Seat, Soft Night Light, Energy Saving, Deodorization, Warm Air Drying, Rear Wash, Front Wash, Moving Cleanse, One Touch, Nozzie Cleaning, Nozzie Self-clean, Auto Flush, Foot 1 notation Flush, Remote Control Flush, Power-off Flush, Adjustable Water Temperature, Adjustable Seat Temperature, Adjustable Air Temperature, Adjustable Water Pressure, Tube Adjustment.

. Before beginning installation, read all instructions first. Save these instructions for future use

Side button using guide



Please follow up the process below before product operation:
1 Turn on the valve.
2. Plug the power cord into electrical inlet.
3. I power button indicator lights, the bidet seat is good to use.

Standby Model

Standby Model

Standby When leaving the seat, press and hold the stop/flush button |\(\bigcup_6 \) or the stop/flush button of the remocontrol for more than 3 seconds to enter standby mode, in standby mode, short press the stop/flush button |\(\bigcup_6 \) or the stop/flush button of the remote control to exit the standby mode mode; in cleaning mode, short press the
stop/flush button |\(\bigcup_6 \) or the remote control stop/flush button to exit the cleaning mode.

Rear Wash I the seated state, short press the button to enter the buttock washing function-Front Wash
I the seated state, short press the button to enter the female cleaning function.

Warm Air Drying
I the seated state, short press the button to enter the drying function. Automatically exit after 4 minutes of continuous drying.

Flush

1. Foot sensing flushing: In the state of leaving the seat, trigger the foot feeling signal, then perform 1 flush. I whe seated state, the foot feel flushing is invalid.
2. Pressing side button flushing: in the absence of cleaning or drying, short press the stop/flush button to flush

Flush without electricity: I the case of no electricity, short press the stop/flush button to flush once.

Packing list

No.	Name	Quantity	No.	Name	Quantity
1	S mart Toilet	1	8	Remote Control User Manual	1
2	User Manual	1	9	Remote Screw	2
3	Remote Controller	1	1 0	Flange	1
4	Remote Expansion Nut	2	11	G1 2/To G3/4 Angle Valve	1
5	Battery Box	1	1 2	9V Battery	1
6	Water Filter	1	1 3	Water Flow Restrictor	1
7	G1 2 to 1/2-14NPSM Adapter	1			





Precautions for use

Attention	I thay cause minor injury or damage, be sure to always pay attention.
○ Forbiddance	Do not operate forbidden content.
1 Enforcement	Must comply with the enforcing content,
(1) Ground	Connect the ground properly

	▲ Warning			
O Do not disassemble	It is absolutely forbidden to disassemble, repair and transform this product by yourself. I $$ t may cause fire, electric shock and other accidents.			
○ No watering	Do not pour water or detergent on the power plug. It may cause fire, electric shock and other accidents.			
○ Forbiddance of fire	Do not bring lit cigarettes or burning species close to the product. It may cause a fire,			
	Please do not continue to use the product whether product falls. Please contact, the stem-eagles service staff for maintenance, When telepower plug and close the initiating which is the product line; 2. The product is muscally hat; 3. The please trades are stated of the product line; 2. The product is muscally hat; 3. The please trades are stronger as contact and the product is accurately that the product is accurate. The product is accurate the product is accurate, and the p			
○ Forbiddance	Only tap water can be used. Otherwise may cause infectious dermatitis and other diseases,			
Oronbiddance	Do not use loose Power outlet. It may cause a fire or electric shock.			
	Please use the power outlet within the specified conditions (110-120V-, 13A,60Hz socket). Do only use 110-1 2V- power supply. Using power beyond the socket regulations may cause the socket to heat up and cause a fire.			
	Do not damage the power cord and seat wire. 1.Do not damage, do not process, do not heat; 2.Do not force bending, do not cury lied, do not pul; 3.Do not put heavy objects on the power cord and the seat lid connection, ignoring product damage and continuing to use may result in fire, electric shorts and other conditions.			
① Enforcement	1. This product belongs to the electrical products, do not put it in places where there is water blears of high humidity. When used in the bathroom, please install ventilation fan or ventilation port to keep the bathroom in good air circulation. Otherwise, it may cause a fire or electric shock. 2. If the power cord is dranged, do not disassemble it yourself and must be replaced by the manufacturer or its service department or relative degartment.			
(1) Grounding	Please check if grounding is done, A product that is not grounded may cause an electric shock in the event of a malfunction or leakage,			

	SHOCK III the event of a manufaction of leakage.			
▲ Attention				
	Forbiddance sitting on the seat for a long time, the seat temporature should be adjusted in low-grade, please not that flow-temperature burs. The following personal should set the seat temporature at low-grade when using the loilet. 1. Children and elderly people who cannot adjust the temperature to the right degree. 2. Pellents, persons with disabilities and other people who can not move freely. 3. Lethargic crowd because of taking hypnotics (Such as steeping tills, cold medicine, etc.) deep drinking and over fatigue.			
0	Do not forcibly stretch the connecting pipe of the water supply pipe. Otherwise it may cause water leakage.			
○ Forbiddance	Do not rely on the seat cover or forcibly press the control panel, Otherwise it may result in malfunction or breakage. Forced application of force may cause seat cover and control panel damage, resulting in personal injury.			
	Do not place containers containing liquid such as vials, cups, cosmetics, pharmaceuticals, etc. or small metal objects on top of the product. Inadvertent entry into the product may result in fire or electric shock.			

Do not place the product in direct sunlight, otherwise the appearance of products may be

People with disabilities, mental retardation, etc. (including children) need to use this toilet under supervision, do not let children play with this toilet.

Do not use the toilet to flush expect shit, urinate and toilet paper, or it may cause toilet jam, sewage overflow. Please do not hit the ceramic to prevent damages that result in leakage. Please do not use in the environment below 3°C.
When installing the inlet angle valve, please tighten firmly. Otherwise it will lead to water rvmen installing the inlet angle valve, please lighten firmly. Otherwise it will lead to water leakage. Prevent damage caused by freezing, Freezing can cause damage to the water hose and product inferiors and causes water leakage. When traveling for long periods of time or when not in use, please unplug the power plug from the outlet.

Unplug the power plug when lightning nersure. from the cutlet.
Unplug the power plug when lightning occurs.
This product is only for bathroom, and should not be used for any purposes other than the ones described in this manual, Otherwise maybe cause to fire, electric shock, personal injury ① Enfo or malfunction.

Do not allow urine and other contaminants to touch the smart toilet. Doing so may cause odor or cause malfunction.

Do not forcibly close the seat and seat cover. It is necessary to avoid the collision of the seat

Otherwise maybe get an electric shock

lid and the seat cover when turning them. Otherwise maybe cause malfunction. Don't clip to the fingers while seat and seat cover switch, otherwise maybe cause bruise. For external maintenance, unplug the power plug from the socket for safety reasons.


	inical	aata		
Rated voltage			110-1 20V~	
	Rated f	requency	60Hz	
	Rated	power	1100W (15°C±1°C inlet water temperature)	
	Length	of wire	1 .2m	
,	Water su	pply mode	Directly connected to the channel	
A	Ambient temperature		About 3°C to 40°C	
Wat	ter suppl	y temperature	About 3°C to 35°C	
W	Vater pre	ssure range	0.1 2MPa-0.8MPa	
	Safety devices		Electrical leakage protector, seated sensor	
0	Heating method		I ntant heating	
Decontaminating apparatus	Warm v	vater temperature	Four grades (Room temperature to 40°C)	
들류	Spray	Buttock cleaning	About 0.5 to 0.8L/min	
confaminal apparatus	volume	Women-only	About 0.5 to 0.8L/min	
8 8	Warm water heater		1100W	
۵	Safety applause		Temperature sensor, temperature fuse, temperature jumper, flowmeter	
	Wind speed		>4m/s	
Drying device	Air temperature		Four grades (Room temperature to 50°C)	
5.8	Drying heater		200W	
	Safety devices		Double-sheet-metal switch, temperature fuse	
Jeodatzing deritz	Deodorant		Activated carbon	
000	Power consumption		1.5W	
_	Seat temperature		Four grades (Room temperature to 40°C)	
Phermal seat	Seat heater		45W	
<u>و چ</u>	Safety devices		Temperature sensor, temperature fuse	
-	Switch structure		Damping slowdown	

Rated power: at room temperature 20±5 *C,inlet water static pressure is 0.18+ Q02MPa. The a turning on the cleaning function and working steadily for one cleaning cycle at the inlet tempera ature of 1 5:1°C





 Product size





Precautions before installation

1. Installation space

The meaning label is enough space for installation at the same time, please confirm the door switch does not affect the product's installation. The distance of water inlet pipe to the ground should be more than 150mm.

28 Before installation, please confirm the location of the outfall and wax seal (For specific location please refer to the logo shown on the right)







Product installation methods

1. The installation of flanges and ceramics

















 
Nozzle end and

2. Connect the water supply pipe

A Before installing the valve, please drain all the impurities and sewage in the pipes. (Discharge the water for 1 to 2 minutes)

water for 1 to 2 minutes)

When the water supply valve is closed, remove the old angle valve and replace it with the machine-equipped angle valve. Please use the supply hose included. Do not use the old one. ② Connect the supply line with inlet valve. ③ After the machine is installed, open the knob to detect no leakage at A, B, C, E. ④ Inspection is correct, plug in the power supply, press the "manual flush" button to confirm the siphon effect of sewage.





3. Battery Installation









Display







ICON DESCRIPTIONS:

- 1. SEAT TEMP: Display the currently set seat emperature.
- 2. WATER TEMP: Display the currently set water temperature.
- 3. SEATED: Seated signal, It will automatically light up when sitting down, otherwise it won't.
- 4. POWER: Automatically light up when power on, otherwise not light.





Product cleaning and maintenance methods

Warning: waterproof toilet cleaning precautions

- **rearming.** waterproor toulet cleaning precautions
 Do not clean the product with your bands in case of damage or failure, to avoid secondary failure.
 Do not use hydrochionic acid detergent, thinner, bleach, benzene or strong detergent to clean the surface of the tollet. Do not be subject because the streshers and deciderate to stick to the toilet bow.
 The body discoloration, cracking and damage caused by the use of the above-mentioned reagents, even within the warranty period also need to paid the services.

1. Nozzle cleaning

- On the machine power mode, do not sit on the seat.

 Press "Nozzle cleaning", entering the manual cleaning nozzle mode. (Can not activate "nozzle cleaning" mode when seated)
 Please use soft brush or soft cloth when cleaning.
- After the cleaning is completed, press the stop button or in the seating state, the cleaning tube is automatically retracted
- Warning: do not force out or push into the cleaning tube during cleaning, or it may lead to machine failure.

2. Filter cleaning

When the water supply valve is closed, cut off the machine water supply, do the following operation.

- Shut off, inlet valve by clockwise rotation

 






Toilet appearance cleaning method diagram

- ① Please unplug the power plug from the socket or press the reset button on the leak protection. ② Use a soft cloth or sponge stained with neutral detergent to clean the machine. ③ Wipe the whole machine with cotton cloth after cleaning.



3. Seat toilet management methods in winter

- In order to prevent freezing in winter, if there is no heating device inside the toilet, please wrap the connecting pipe with cloth or use other insulation materials for insulation.
- with court or use outer installation transferrals for insulation.

 When the amblent temperature is below 0°C.

 1. Stop using the product;

 2. Pull out the power plug or press the reset button on the leak protection;

 3. Close the inlet valve.
- 3. Close the linet vave.
 Note:
 Please tighten the filter firmly, otherwise it may cause water leakage.
 Do not grate the filter next too strongly as it may distort or rupture.
 When blockage blocks the filter, the pressure of the flushing water may not be enough, so please clean
 When blockage blocks the filter, the pressure of the flushing water may not be enough, so please clean
 When blockage blocks the filter, the pressure of the flushing water may not be enough, so please clean
 We recommend that you do not use detergent when cleaning. Clean it directly with tap water.

How to deal with common problems

Problems		Check	Handling	
Functions does not work at all.		The seat sensing area uses cloth cover, mat and other items.	Please remove the cloth cover, mat and other items.	
		Power is cut.	Please wait for power recovery.	
		Socket is loose or poor contact.	Plug in, ensure good power supply.	
		Whether the leakage protection reset button is pressed.	Please press the reset button on the leak protection.	
Flushing		No water.	Please wait for the water supply to resume	
	Water doesn't	Whether the inlet valve is open.	Open the inlet valve.	
	come out.	Filter is clogged with dirt.	Please change or clean the filter.	
		Whether the water supply tube is bent and clogged.	Eliminate the water supply pipe bending.	
	Flushing power is not strong enough.	Water pressure is set at low-grade.	Turn the water pressure up to high.	
윤		Filter is clogged with dirt.	Please change or clean the filter.	
		Clean the nozzle to see if there is any blockage.	Please clean the nozzle.	
	Water temperature is not high enough.	Whether the water temperature is set at low or normal temperature.	Turn the water temperature up to high.	
	No water supply when flushing.	Press the Rear Wash or Front Wash key for about 60s, the machine will automatically stop.	Please restart cleaning.	
		The body is removed from the seat during the cleaning process.	Please sit back in the seat circle and restart cleaning.	
Toilet Seat	The heated seat is not heating.	Thermal seat's heating strength is set in the low or off state.	Turn the seat temperature up to high.	
		The toilet is set in the energy-saving state.	Please exit energy-saving state.	
		Whether the power outage.	Please wait for power recovery.	





07