



*IntelligentToilet*

**INSTRUCTIONS FOR THE USE OF PRODUCTS**

**Wisdom knows you better**  
Automatic Intelligent Toilet

Note: before use please to cautiously read this manual  
Please pay attention to the warning and regulation of obeying the product manual inside marking

## Safety directory

Please cautiously read before installing and using.

### Warning-To avoid electric shock

1. Do not place the product where it may get wet.
2. Do not drop the remote control into the water.
3. Do not spray water into the product or plug.

### Warning: To prevent the possibility of burns, electric shocks, fires and injuries.

1. Young children, temperature insensitive users, when using this product, should be accompanied by others. And turn off or lower the seat temperature.
2. The product is limited to the function on the manual, do not use other equipments.
3. Do not continue to use when the product is out of order, damaged or flooded. Please send the product to the designated repair center for repair.
4. Please make sure that the wires are not damaged by burning.
5. Do not use this product when you are out of your mind.
6. Do not plug the product or pipe.
7. Do not use outdoors.

### Please be sure to observe the following

Please don't sprinkle urine at the essence and spray.

Pull out the plug when it thunders.

Strictly forbid to directly flush with water.

Please do not wipe seat and cover with dry cloth or toilet paper.

Please do not open the seat ring or cover violently.  
- May cause cracking or malfunction.



Please take antifreeze measures to prevent damage caused by freezing.



Please do not put heaters near this product.  
- Discoloration or malfunction will occur



## Safety Caution


Note: please cautiously read before using

Please read carefully before using. The cautions listed here are related to safety and please follow. 

This product is an electrical product. Please do not install it in a place where it is easy to be splashed by water or high humidity. When using in the bathroom, please install a vent to keep good air flow in the bathroom.

The socket for power distribution should be set as follows

- The gearing position of electric outlet pleases to give examples 0.3 min the ground above, and leave bathtub as far as possible a little bit farer.
- The back track of electric outlet pleases use a high feeling and rapid type electric leakage switch(the sum certainly responds the electric current 15 mA following) or use to insulate the transformer 1.5 KVA above, the 3 KVA is following)carry on a protection.

 The product connects a ground of line to carry on to connect a ground of processing, if has never carried on to connect a ground of processing, may arouses to get an electric shock.

Note: the grounding treatment mentioned here means that the grounding resistance is below 100Ω, and the grounding wires of the switchboard shall be copper wires with a diameter of more than 1.6mm.

While using in the bathroom please confirm the power plug have already used silica gel to carry on a waterproof processing.

### Examples and illustrations of ICONS



It is not feasible (prohibited).  
The image on the left shows (disassembly is prohibited).



Represents something that must be (enforced).The left-hand diagram shows (must comply).



Must obey

#### Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time.
- Please set the temperature to room temperature when the following persons use the seat to dry gently.

- Children, the elderly, the sick, the disabled, etc.
- People who take sleeping pills, get drunk and get overtired.

#### Do not use any power source other than AC 220V/110V

- It may start a fire

#### Keep cigarettes and other fire kindling away from the product

- It may start a fire

#### Do not use loose and unstable power sockets

- It may cause fire or electric shock

#### Please don't sprinkle water or rinse on product essence or the power plug.

- May arouse a fire or get an electric shock
- May cause toilet break, damage or indoor seepage.

#### When long time didn't use, please pull out the power plug.

- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use.

#### Please do not flush other items except for urine and feces

- May cause then block, sewage outside overflows.

#### Do not unplug the power plug with wet hands

- It may cause electric shock

#### Do not distort or damage the water inlet

- It may cause a leak



Prohibit

**Do not continue to use the product when it breaks down**

When the following occurs, please unplug the power plug, close the inlet Angle valve, stop the inlet.

- Ceramic WC is leaking
- Cracks appear
- Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged

- If continued under the condition of failure, it may cause fire, electric shock or indoor seepage problems

**Do not disassemble, repair or transform the product without permission**

- It may cause a fire or electric shock

**Do not install this product in damp places such as bathrooms**

- It may cause a fire or electric shock

**Do not damage the power cord or toilet seat cable**

- Don't pull
- Don't process
- Don't heat
- Don't forcibly bent
- Do not place heavy objects on the power cord and toilet seat connection line.

- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair.

**Do not use extension wires, otherwise, it may cause a fire or electric shock**

- Do not connect wires or use extension cords, which may cause fire and electric shock.

 
**Do not use unhealthy water**

- May cause skin irritation and other problems

**The first use of Intelligent toilet**

Note: To ensure the normal use of the product, please follow the instructions to text.

- 1.Insert the power plug into the AC (AC) 220/110V socket
- 2.Please confirm whether the indicator of the digital display panel is lit
- 3.Confirm whether the inlet valve is take on
- 4.Whether the hose between the wall Angle valve and the toilet inlet valve is installed in place

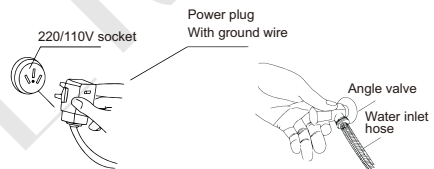


**Caution-Confirmed matters before using**

- 1.Check whether the sprinkler head and water pipe leak, dry all parts of the water pipe and check with blotting paper.
- 2.Press the seat around the seat sensor, whether there is a sound.
- 3.Check whether the cleaning, drying, automatic deodorization and automatic flushing are normal
- 4.Whether the Damped structure is normal.

Check the functions of cleaning, drying and automatic deodorization, make sure the sensor is on. When cleaning, cover and block the spray nozzle, so as not to splash.

 Seating sensing position

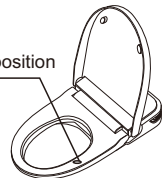

**Warning - Be sure to firmly connect ground wires**

The power plug of this product is a three-phase plug (with ground wire). There is a danger of electric shock when there is a fault or leakage of electricity. If there is no ground plug in the socket, consult with the electrical installation company. Do not use power supply other than AC 220V/110V, please wiring according to relevant regulations.

\*Using the wrong power supply can easily cause fire\*

1. Radar switches to foot cover: press the cover button on the remote control for 5 seconds,
2. Turn off | turn on disseat water flushing: press the automatic water flushing button on the remote control for 5 seconds
3. Turn off | turn on the function of flushing upon cover falling: press the cover and flushing buttons on the remote control at the same time

## Instructions for remote control

Note: Please read the following carefully before use

### POWER



Press this key to open or shut off the power

### DRYING



Press this button to start drying when you are seated. Warm air drying will stop automatically after 3 minutes.

### STOP



You can stop the "Hip cleaning", "Female cleaning", "Drying" and other functions in operation.

### HIP/ MOBILE



Press this button when you are seated, the Hip wash cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

### FLUSH



Press this button and will start flushing.

### FEMALE/ MOBILE



Press this button when you are seated, the female cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

### CLEANING HEIGHTEN



It can increase the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

### NIGHT LIGHT



The night light can be turned on or off in the power-on state.

### FORWARD



Press this button during the "hip" or "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

### CLEANING HEIGHTEN



It can decrease the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

### NOZZLE CLEANING



Nozzle extended and water out for nozzle washing

### FORWARD



Press this button during the "hip" or "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

### Water Temperature



4 degrees can adjust the water temperature the temperature can be set as , one degree : the environment temperature, second degree :about 93°F, Third degree :about 96°F, Forth degree : about 99 °F

### Seat Temperature



4 degrees can adjust the seat temperature the temperature can be set as,one degree : the environment temperature, second degree :93°F, Third degree :96°F, Forth degree : about 99°F.

### Wind Temperature



4 degrees can adjust the wind temperature the temperature can be set as , one degree: the environment temperature, second degree:about 93°F, Third degree :about 96°F, Forth degree : about 99°F.

This key is only applicable to the type of sensor flip-over

### COVER



Press this button, the seat cover will open automatically, and then press it again, the seat cover will close automatically.

### SEAT



 
Press this button, the seat opens automatically, and press again to close the seat automatically.

### CODE FOR REMOTE CONTROL

Rotate the knob until the buttocks are clean and hold for about 3 seconds. After a sound, press any button of the remote control to complete the code.

Note: If the remote control has no response in the first time, it should be code.

## Side knob instructions

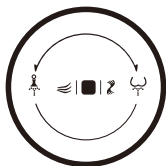

Power on/off: long press the knob for more than 3 seconds  
 Hip cleaning: Turn the knob to the left  
 Female cleaning: Turn the knob to the right  
 Stop: Press the knob once  
 Toilet flushing: Press the knob once before seating  
 Warm air drying: Press the knob once when seating

## Description of other functions

**Flushing by foot sensor** Close to the foot sensor, turn on the scour function (manual clamshell)

**Open cover and seat by foot sensor** Close to the foot sensor, automatically open/close cover and seat (automatic flip cover)

**Radar automatic clamshell function** Close to the toilet, automatically open the cover, automatically close the cover after leaving and flush automatically (automatic flip cover)

## Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

### Smart toilet cleaning and maintenance methods

 
Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.

- Static electricity will absorb dust, resulting in the product black, dirty,

water wipe can prevent the generation of static electricity.

- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.

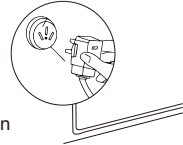


Unplug the power supply before maintenance

### Cleaning and maintenance of spray head

 If there is dirt in the nozzle. Please clean it with a small brush such as a toothbrush.

- Do not stretch and bend the spray head.

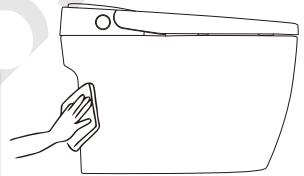

### Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.

Must obey - Poor insulation may cause a fire.

## Common fault diagnosis

Note: If similar fault is found, please read the following solution or contact after sales

| Fault phenomenon                | Fault analysis  | Fault handling  |
|---------------------------------|---|---|
| Product unavailable             | Check to see if the power/socket is loose   | Please check the circuit  |
|                                 | Whether there is leakage (the display light of leakage protection plug is not on) | Remove the power plug from the socket and replug it later. Press the reset switch of the leakage protection plug. If the elbow still cannot be operated, please unplug the power plug and entrust the repair. |
| No water with spray             | Check if water is cut off   | Pending resumption of water supply  |
|                                 | Check that the Angle valve is closed  | Open the Angle valve  |
|                                 | Check if the inlet filter is blocked  | Clean or replace the filter   |
|                                 | Check the inlet pipe for bends  | Exclude the intake bend   |
| Cleaning insufficient rigidity  | Check whether the cleaning pressure is at the lowest level                        | Refer to the instruction manual for regulating the water pressure   |
|                                 | Check if the inlet filter is blocked  | Clean or replace the filter   |
| Spray water disorderly          | Abnormal operation  | Unplug the plug for one minute and then switch it back on   |
| water temperature is not enough | Check that the water temperature is set low                                       | Adjust the water temperature according to the instructions  |
|                                 | Whether the hot and cold massage function is on                                   | Turn off the hot and cold massage function according to the instructions  |
| The washer often drips water    | Solenoid valve failure  | Please get professional maintenance technicians   |

| Fault phenomenon  | Fault analysis  | Fault handling  |
|---|---|---|
| Misoperation of remote control  | Check the battery level of the remote control is it too low         | Please replace the battery  |
| Drying/seat temperature too low/no heating                                  | Check whether the temperature is set at low or normal temperature   | Adjust the temperature according to the instruction   |
|   | Whether to turn on the power saving function                        | Refer to the manual to choose to turn off the power saving function   |
| Seat/ cover falling too fast  | Failure of damping drop function                                    | Please get professional maintenance technicians   |
| The cleaning function cannot be used normally                               | Is there any other hard material holding it under the seat          | Remove the hard objects   |
|   | Whether the body's sensing area is covered                          | Adjust the body sensing area of the seat cover  |
|   | Whether the power supply is restored during the power failure       | Unplug the plug for one minute and then switch it back on   |
|   | The skin completely cover the human body induction area of the seat | Sensor failure, please get professional maintenance technicians   |
| Seat/cover cannot be opened or closed<br>* Only for automatic flip machines | Failure of automatic damping function                               | 1. Disconnect the plug for one minute and switch it back on<br>2. The above treatment is invalid, please ask professional personnel for maintenance |
| Low water pressure does not flush clean                                     | Filter mist blocking  | Clean the filter according to the instruction   |
|   | Pipe bending  | Observe whether the connection line bends and keep the water supply line smooth   |
| No siphon flushing is not clean when water pressure is normal               | Air escapes from the sewage outlet                                  | Please get professional maintenance technicians   |
|   | The S-bend is blocked   | Please buy water pipe dredger in the market for dredging  |
| Flush is not clean when water pressure normal                               | Flush valve failure   | Ask professionals for maintenance   |

 
## Product standard

|  |   |                 |  |
|--|---|-----------------|--|
| <b>Rated voltage</b>                         | Alternating voltage 220V/110V±10%, 50HZ/60HZ  |                 |  |
| <b>Rated power</b>                           | Water inlet temperature: 59°F    Outlet water temperature: 99°F<br>Water discharge: 750ml/min    Power: 1350W |                 |  |
| <b>Cleaning</b>                              | Water outlet  | Hip cleaning    | About 700 ml/min   |
|  |   | Female cleaning | About 700 ml/min   |
|  | Outlet water temperature  |                 | Normal temperature, and 93°F/96°F/99°F(4 grades)   |
|  | Water heating   |                 | Instant water heater   |
|  | Heater power  |                 | Water inlet temperature: 59°F , Outlet water temperature: 99°F<br>Water discharge: 750ml/min    Power: 1350W |
| <b>Seat heating</b>                          | Seat temperature  |                 | Normal temperature, and 93°F/96°F/99°F(4 grades)   |
|  | Heater power  |                 | 40W  |
| <b>Warm drying</b>                           | Wind temperature  |                 | Normal temperature, and 93°F/96°F/99°F(4 grades)   |
| <b>Spray position</b>                        |   |                 | Adjustable Fore and Aft  |
| <b>Water temperature</b>                     |   |                 | 41~99°F  |
| <b>Water Pressure ( With Water Tank )</b>    |   |                 | The lowest pressure : 0.06 Mpa<br>the highest pressure : 0.75 Mpa ( static)                                  |
| <b>Water Pressure ( Without Water Tank )</b> |   |                 | 0.15-0.75 Mpa (static) is about 5L of water in 15 seconds  |

Due to the different printing time of the materials, the product specifications may be slightly changed. Please refer to the material object.



1. The confirmation of the installation environment, The measurement distance is 300mm or greater

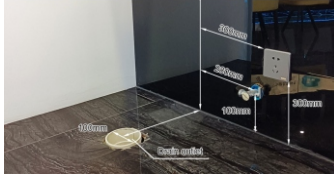

The confirmation of the installation environment



2. Put the flange ring into the drain outlet and mark the screws positions



3. Take off the flange ring and drill four holes for screws



4. Put the screws into the holes



5. Put the flange ring into the drain outlet and install it



6. Install two long screws as below picture



7. Raise the toilet seat.



8. Take off the whole toilet seat and unscrew the flexible tube and black wire



9. Turn over the toilet bowl and install the flange ring as below picture



10. Apply some glass glue on the bottom of the toilet (The glass adhesive in the picture needs to be purchased by oneself.)



11. Move the toilet to the location where it will be installed



12. Make sure two holes in the bottom of the toilet align with the two long screws in the flange ring, then install it



13. Put the toilet seat in the toilet and reconnecting the flexible tube and black wire



14. Press the cover down slightly harder

 


15. Apply some glass glue to fix the toilet and insulate the outside dirt from entering.  
(The glass adhesive in the picture needs to be purchased by oneself.)







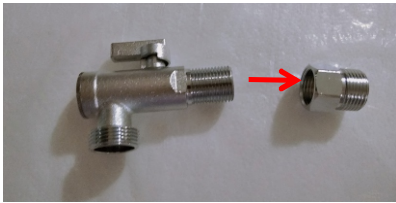



16. Finally connecting the flexible tube to the inlet angle valve

Attention: The above installation steps are universal for all models of toilets and are only for your reference during installation.  
If you find that the details in the pictures do not match the actual product, please ignore them!



The connector is separately matched.  
If the angle valve interface does not match the water pipe,  
you can connect a 1/2 to 7/8 adapter

|   |  |  |  |  |   |  |   |
|---|--|--|--|--|---|--|---|
| 1 pcs   | 1 pcs  | 1 pcs  | 1 pcs  | 1 pcs  | 1 pcs   | 1 pcs  | 1 pcs   |
|  |  |  |  |  |  |  |  |
| flange ring   | instruction  | remote control   | water value  | standby battery  | transfer value  | flange   | screws  |
| A   | B  | C  | D  | E  | F   | G  | H   |



# Smart Toilet

## Part Information

